



TEE POST SHELVING ASSEMBLY

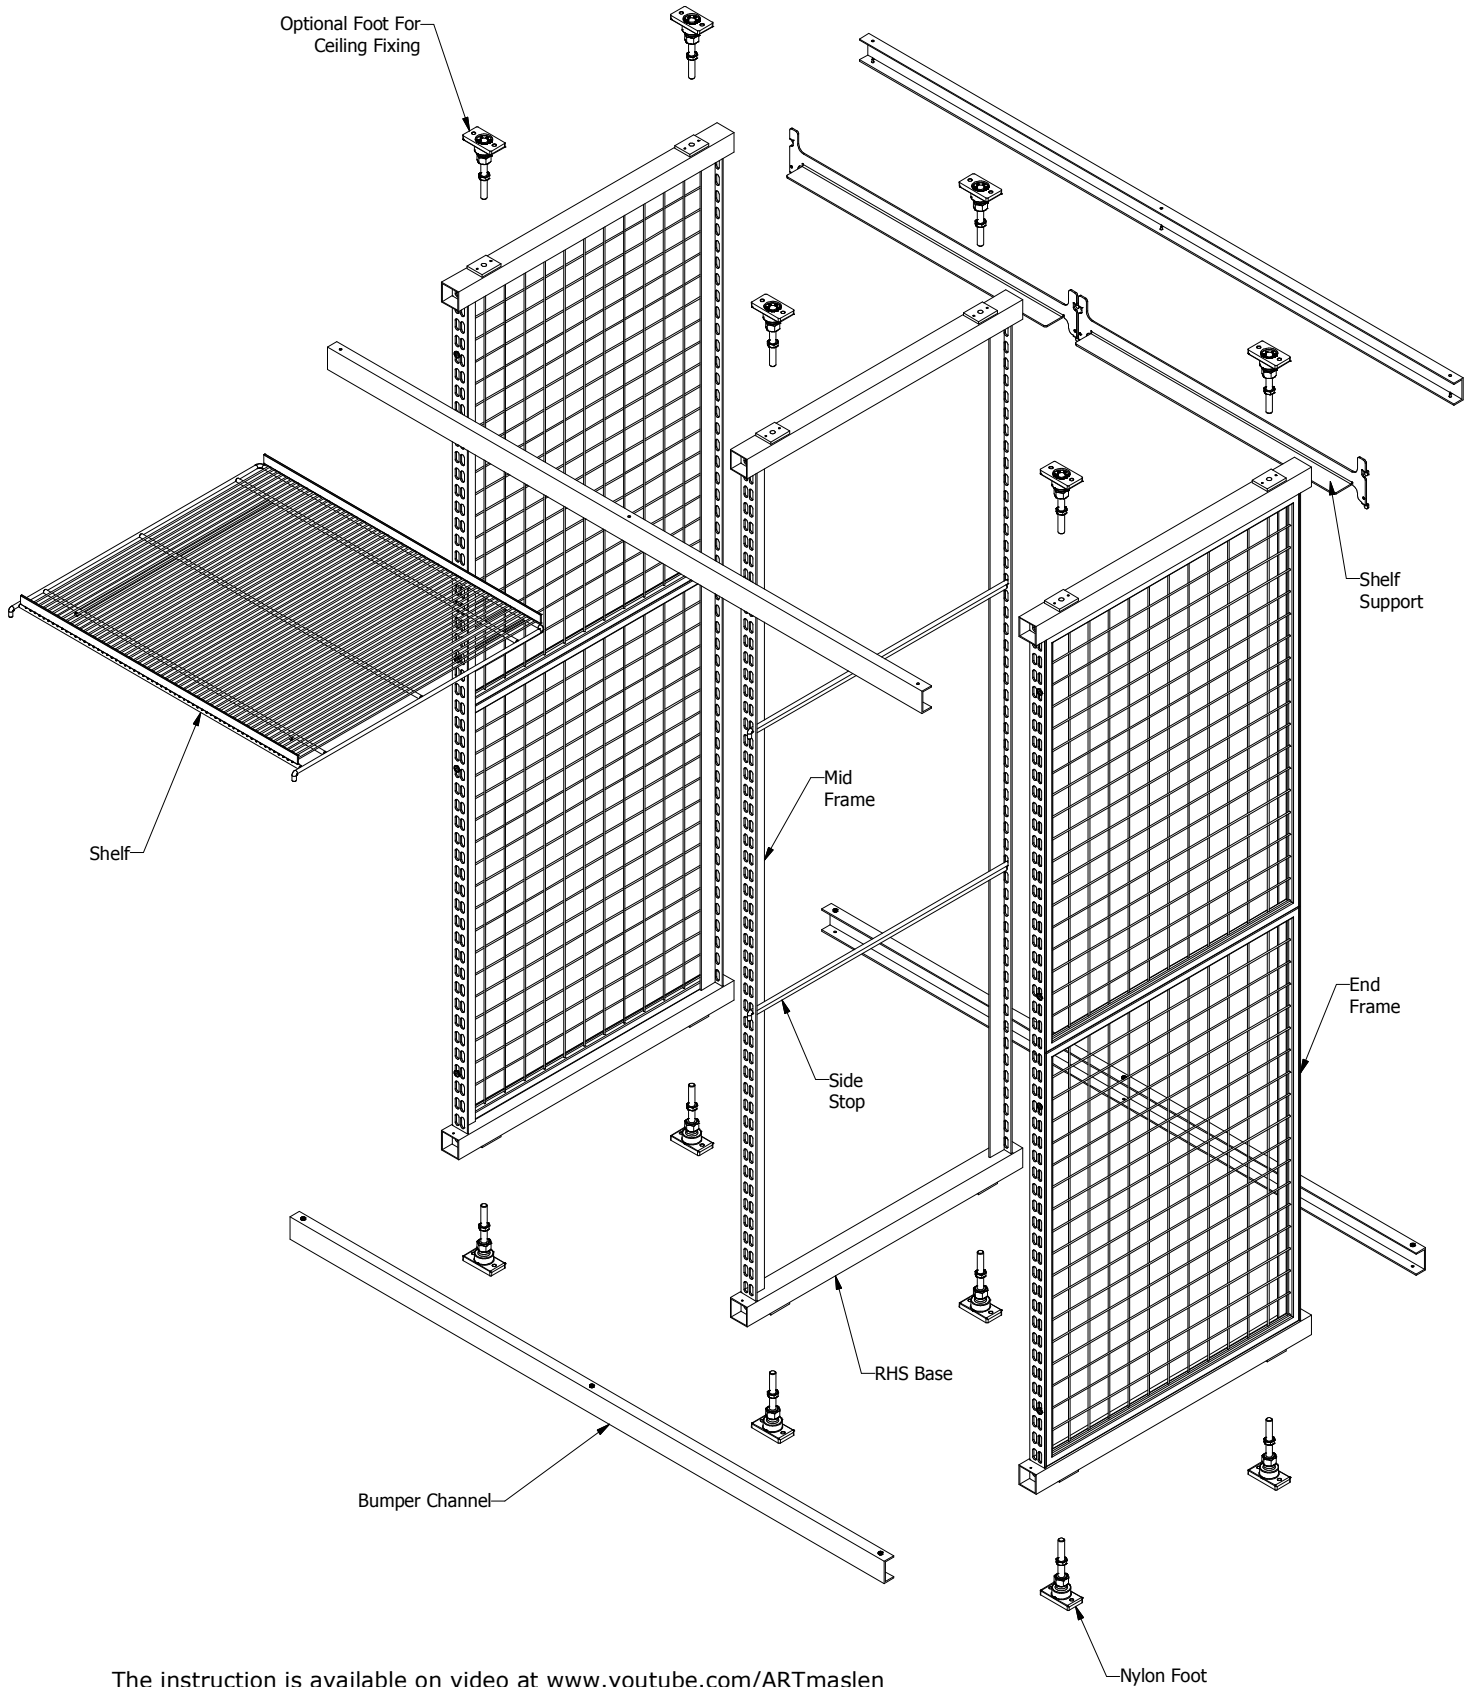


The instruction is available on video at www.youtube.com/ARTmaslen

1) Screw nylon foot assembly all the way in to RHS base, leave locking nut loose.

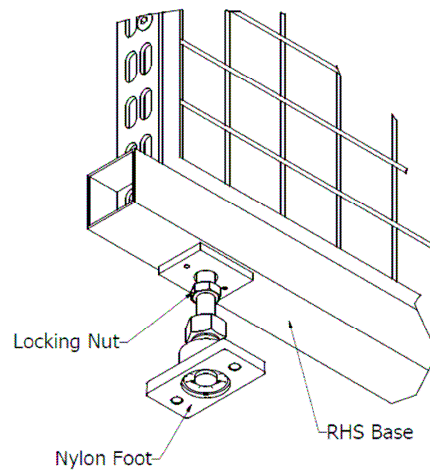


2) Stand mesh end frame and 1 mid section frame, position highest desired shelf support by inserting tabs into slots in rear T post and pushing down in both frames, then position lowest desired shelf support. Insert locking screws and tighten with 5mm allen key, shelf supports only need to be in rear posts.

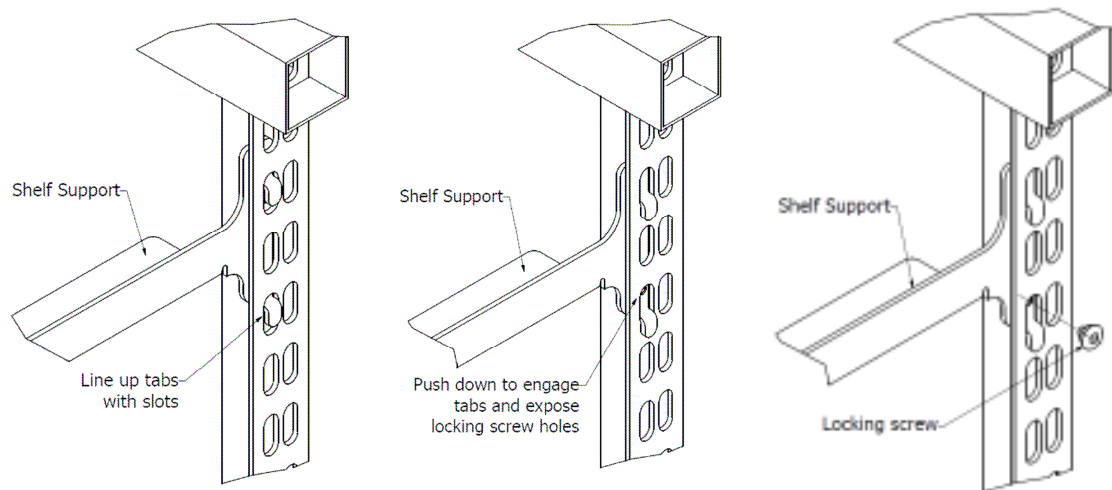


3) Continue for remaining shelving bays, finishing with a mesh end frame.


4) Install top shelf by tilting rear of shelf upwards and inserting hooks through slots in front T post, lay rear of shelf on flat section of shelf support. Install remaining shelves on the top row and bottom row the same way.

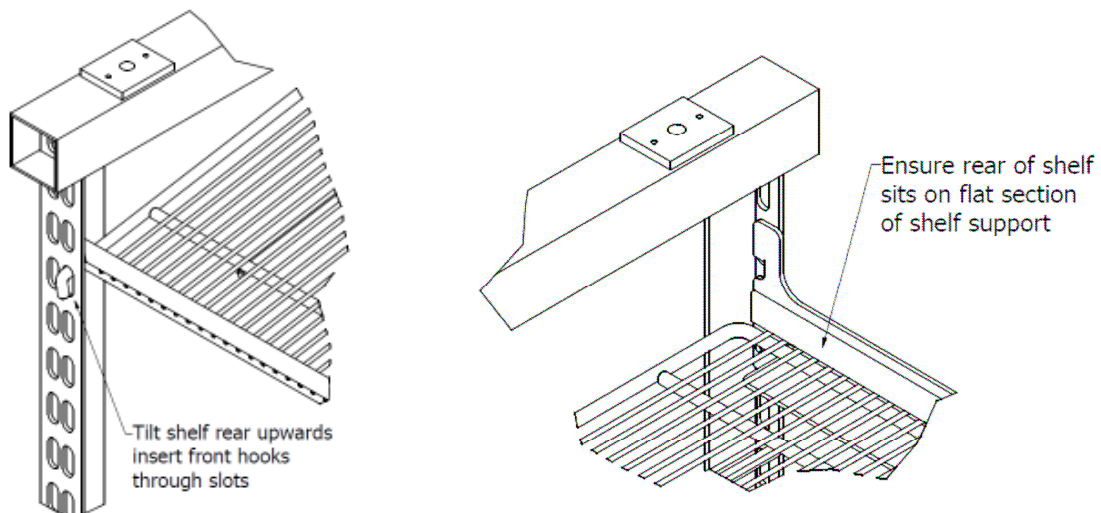

5) Once top and bottom rows of shelves are installed, fit front and rear, top and bottom bumper channels with the screws provided.

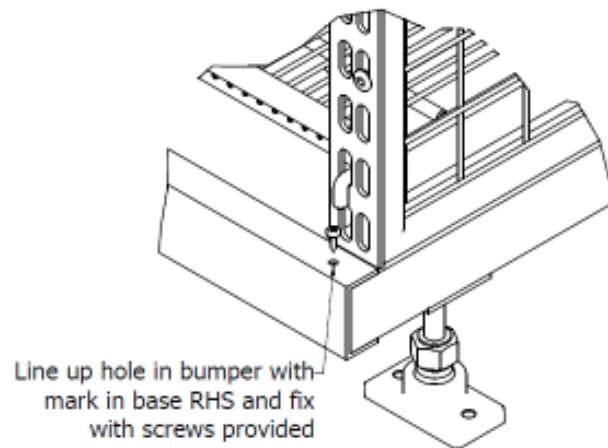

6) After installation of all shelf supports, shelves and bumper channels, install side stops in mid frames in any of the spare slots by inserting one end into slot and pushing through far enough so other end is clear and free to pull back into slot on opposite post, push down to lock side stop in place. Side stops must not be more than 800mm apart.

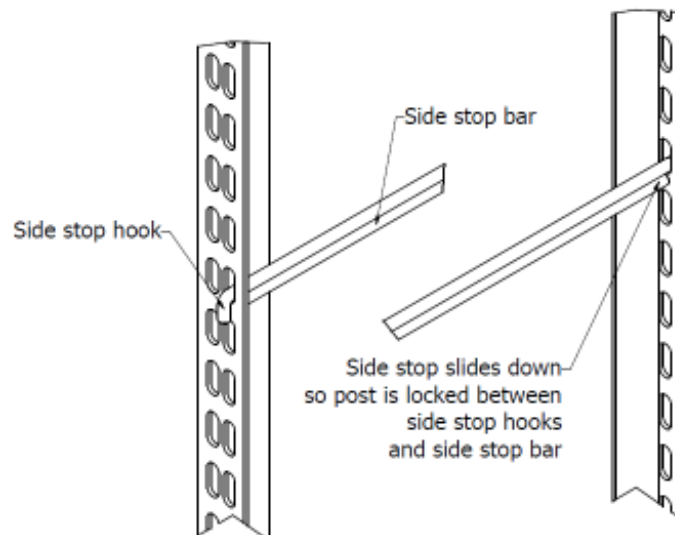

7) Once assembly is complete with all shelves and side stops in place, level the end frames and mid frames using the adjusting screw on each nylon foot, once level the locking nut **MUST** be tightened. Optional nylon feet can be added to top RHS to enable fixing to ceiling.

